

MAINTENANCE

page

| | |
|-----------|---|
| 85 | MAINTENANCE |
| 85 | THE IMPORTANCE OF MAINTENANCE |
| 86 | MAINTENANCE SAFETY |
| 87 | SAFETY PRECAUTIONS |
| 88 | MAINTENANCE SCHEDULE |
| 91 | TOOL KIT |
| 92 | SERIAL NUMBERS |
| 93 | COLOUR LABEL |
| 94 | AIR CLEANER |
| 95 | ENGINE OIL |
| 100 | SPARK PLUGS |
| 105 | THROTTLE OPERATION |
| 106 | IDLE SPEED |
| 107 | COOLANT |
| 108 | DRIVE CHAIN |
| 113 | DRIVE CHAIN SLIDER |
| 114 | FRONT AND REAR SUSPENSION INSPECTION |
| 115 | SIDE STAND |
| 116 | WHEEL REMOVAL |
| 122 | BRAKE PAD WEAR |
| 124 | BRAKE SYSTEM INSPECTION |

page

| | |
|------------|--|
| 125 | BATTERY |
| 127 | FUSE REPLACEMENT |
| 130 | BRAKELIGHT SWITCH ADJUSTMENT |
| 131 | BULB REPLACEMENT |
| 138 | CLEANING |
| 143 | STORAGE GUIDE |
| 143 | STORAGE |
| 145 | REMOVAL FROM STORAGE |
| 146 | TAKING CARE OF THE UNEXPECTED |
| 147 | SPECIFICATIONS |
| 151 | CATALYTIC CONVERTERS |