


## REAR SEAT COVER

See your Honda dealer for installation/  
removal of the rear seat cover.

### Installation:

1. Remove the seat (page 58).
2. Remove the caps (1), bolts (2) and washers (3).
3. Remove the rear grab rails (4).
4. Install the grab rail covers (5).

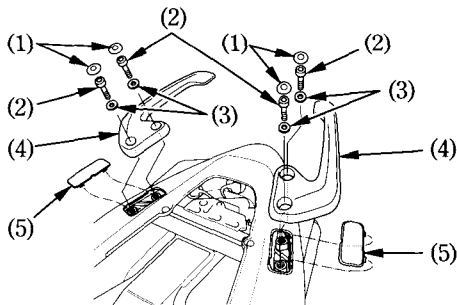

- (1) Caps
- (2) Bolts
- (3) Washers

- (4) Grab rails
- (5) Grab rail covers