

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]							REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30		36
			× 1,000 mi	0.6	4	8	12	16	20		24
		NOTE	MONTH		6	12	18	24	30	36	
* FUEL LINE						I		I		I	—
* THROTTLE OPERATION						I		I		I	105
AIR CLEANER		NOTE (2)					R			R	94
SPARK PLUGS											EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R 100–104
* VALVE CLEARANCE								I			—
ENGINE OIL				R		R		R		R	95–99
ENGINE OIL FILTER				R		R		R		R	97–99
* ENGINE IDLE SPEED				I	I	I	I	I	I	I	106
RADIATOR COOLANT		NOTE (3)				I		I		R	36–37
* COOLING SYSTEM						I		I		I	—
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—