

Parts Location

Rear cowl [▶P.111](#)

Rear seat [▶P.64](#)

Front seat [▶P.65](#)

Main fuse [▶P.114](#)

Battery [▶P.71](#) / Battery cover [▶P.70](#)

Front turn signal cover [▶P.109](#)

Front brake lever [▶P.86](#)

Throttle grip [▶P.85](#)

Coolant reserve tank [▶P.76](#)

Engine oil fill cap [▶P.72](#)

Engine oil filter [▶P.74](#)

Engine oil inspection window [▶P.72](#)

Centre stand

Rear brake pedal

Rear brake fluid reservoir [▶P.78](#)

Rear turn signal cover [▶P.111](#)

