


## Under Cowl

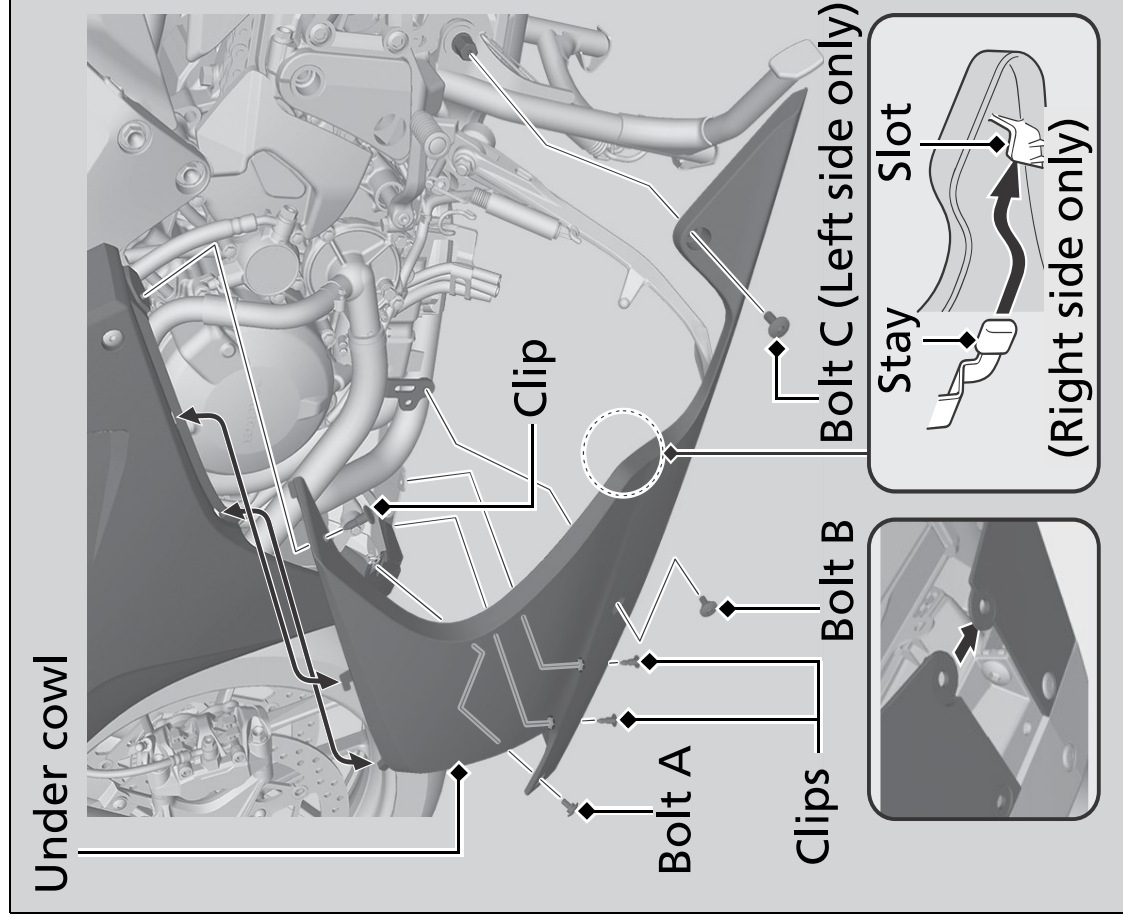

The right and left under cowls must be removed to replace the engine oil filter.

### Removal

1. Park your motorcycle on its centre stand on a firm, level surface and lower the side stand.
2. Remove the clips on both sides. ► P. 69
3. Remove the bolt A and bolt B on both sides.
4. Remove the bolt C (left side only).
5. Remove the right and left under cowls while carefully releasing the tabs from the slots of each upper cowl and the slot of right under cowl from the stay.
  - Be careful not to apply weight to the under cowls.

### Installation

Install the parts in the reverse order of removal.