

Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your motorcycle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

NOTICE

Using the wrong oil filter can result in serious damage to the engine.

1. Park your motorcycle on its centre stand on a firm, level surface.
2. Remove the right and left under cowls.
➔ P. 68
3. If the engine is cold, idle the engine for 3 to 5 minutes.
4. Turn the ignition switch off, stop the engine and wait for 2 to 3 minutes.
5. Place a drain pan under the drain bolt.

6. Remove the oil fill cap, drain bolt, and sealing washer to drain the oil.

