

Troubleshooting

Engine Will Not Start (HISS indicator stays on)	P. 94
Overheating (High coolant temperature indicator is on)	P. 95
Warning Indicators On or Flashing	P. 96
Low Oil Pressure Indicator	P. 96
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 96
ABS (Anti-lock Brake System) Indicator	P. 97
TCS (Traction Control System) Indicator	P. 98

Other Warning Indications	P. 99
Fuel Gauge Failure Indications	P. 99
Handle Grip Heater Failure Indication	P. 99
Tyre Puncture	P. 100
Electrical Trouble	P. 107
Battery Goes Dead	P. 107
Burned-out Light Bulb	P. 107
Blown Fuse	P. 113