


Coolant Temperature Meter

Coolant temperature meter (1) shows coolant temperature digitally.

If the display is air temperature, push the TEMP button (3).

Temperature display

Below -10°C	"--" is displayed.
Between -9°C and 50°C	Actual coolant temperature is indicated.
Above 50°C	The display will remain " 132°C "

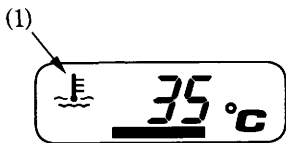


(1) Coolant temperature meter



(2) Red line

(3) TEMP button

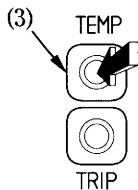

Overheating message

When the coolant temperature reaches 122°C , the display begins to flash and "red line" (2) appears on the display.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 29 – 30 and do not ride the motorcycle until the problem has been corrected.

If the coolant temperature reaches 122°C while the air temperature display is selected, the display will automatically switch to coolant temperature.

CAUTION:

*** Exceeding maximum running temperature may cause serious engine damage.**