

## Removal:

1. Removal can done in the reverse order of installation.

Tighten the grab rail mounting bolts (1) securely.

TORQUE:

34 N·m (3.5 kgf·m , 25 lbf·ft)

### **▲WARNING**

**\* If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. The grab rail could come off easily and result in serious injury if the assembly is not made properly.**

2. Install the seat properly (page 44).