

SPARK PLUGS

(Refer to the maintenance precautions on page 72).

Recommended plugs:


Standard:

CR9EH-9 (NGK) or
U27FER-9 (DENSO)

For cold climate: (Below 5 °C, 41 °F)

CR8EH-9 (NGK) or
U24FER-9 (DENSO)

1. To remove the spark plug from the rear cylinder, raise the fuel tank (page 53).
2. Remove the spark plug cap (1) from the spark plug, and remove the spark plug using the spark plug wrench (2) furnished in the tool kit.

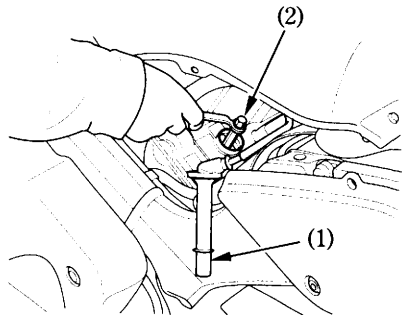

- (1) Spark plug cap
- (2) Spark plug wrench