

## IDLE SPEED

(Refer to the maintenance precautions on page 72).


The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral.
2. Adjust idle speed with the throttle stop screw (1).

Idle speed (In neutral):

$1,200 \pm 100 \text{ min}^{-1} (\text{rpm})$ ...E,F,G,ED  
ND,U

$1,200 \pm 50 \text{ min}^{-1} (\text{rpm})$  ...SW

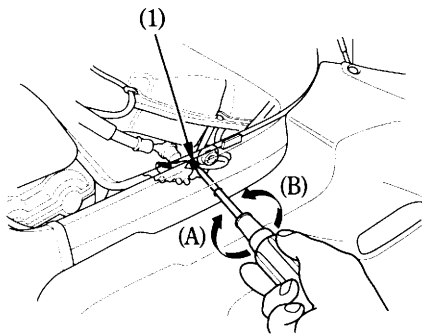

(1) Throttle stop screw

(A) Increase

(B) Decrease