



Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

Importance of Maintenance	P.39	Engine Oil	P.61
Maintenance Schedule	P.40	Coolant	P.65
Maintenance Fundamentals	P.43	Brakes/Clutch	P.67
Tool kit	P.53	Side Stand	P.70
Removing & Installing Body Components	P.54	Drive Chain	P.71
Seat	P.54	Throttle	P.74
Clip A	P.55	Other Adjustments	P.75
Clip B	P.55	Clutch and Brake Levers	P.75
Clip C	P.56	Rear Suspension	P.76
Right Front Side Cowl	P.57	Headlight Aim	P.77
Left Rear Cowl	P.59	Brakelight Switch	P.78
Battery	P.60	Idle Speed	P.78