


Instruments (Continued)

To reset the tripmeter, average fuel mileage and average speed

To reset tripmeter A, average fuel mileage and average speed (these are based on tripmeter A) together, press and hold **SEL** button while tripmeter A is displayed.

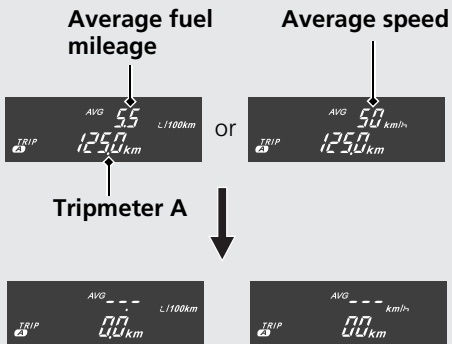

To reset tripmeter B, average fuel mileage and average speed (these are based on tripmeter B) together, press and hold **SEL** button while tripmeter B is displayed.

