

Instruments (Continued)**5 Changing the fuel mileage meter unit:**

- ① Press **SEL** button to select "L/100km" or "km/L".



If the "mph" for speed and "mile" for mileage are selected, the fuel mileage shown by "mile/L" or "mile/gal".



- ② Press **SET** button. The fuel mileage meter unit is set, and then the display moves to the setting of mileage countdown.

6 Setting the mileage countdown:

- ① The preset figure is displayed and the third digit will be flashing.



- ② To set the third digit, press **SEL** button until the desired figure appears.

▶ Press and hold **SEL** button to advance the figure fast.

- ③ Press **SET** button. The second digit starts flashing.



- ④ Repeat the steps ② and ③ for the second and first digits.