


Torque Control indicator

- Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.102**

 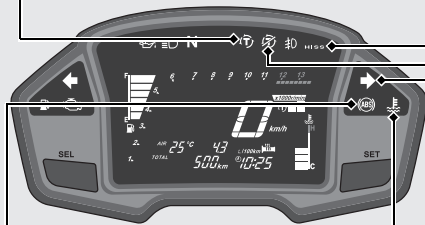


ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding:  **P.101**

HISS indicator **P.118**

- Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.

Torque Control OFF indicator

Comes on when the Torque Control is turned off.

Right turn signal indicator

High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

If it comes on while riding:  **P.99**