



### Ignition Switch

Switches the electrical system on/off, locks the steering.

▶ Key can be removed when in the OFF or LOCK position.

### Engine stop switch

Should normally remain in the  (Run) position.

▶ In an emergency, switch to the  (Off) position to stop the engine.

### Hazard switch

Switchable when the ignition switch is on. Can be turned to off regardless of the ignition switch position.

▶ The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on.

### Start button

### Horn button