


Removing & Installing Body Components

Rear Seat

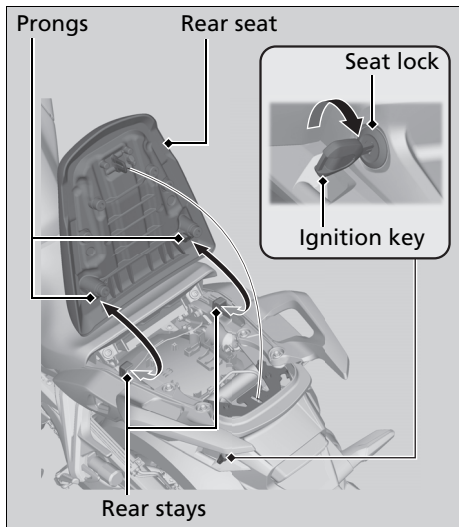

Maintenance

Removal

1. Insert the ignition key into the seat lock.
2. Turn it clockwise, then pull the rear seat up and back.

Installation

1. Insert the prongs into the rear stays on the frame.
 2. Push down on the rear of the rear seat.
Make sure that the seat is locked securely in position to pull it up lightly.
- The seat locks automatically when closed.
Take care not to lock your key in the compartment under the rear seat.