


## WHEEL REMOVAL

(Refer to the maintenance precautions on page 47).

### NOTE:


\* This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

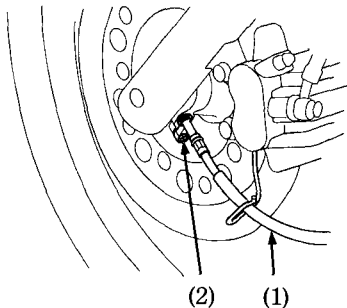

- (1) Speedometer cable
- (2) Speedometer cable set screw

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable (1) by removing the speedometer cable set screw (2).
3. Loosen the fork pinch bolts (3) and remove the front axle (4). Pull out the front axle. Remove the front wheel.

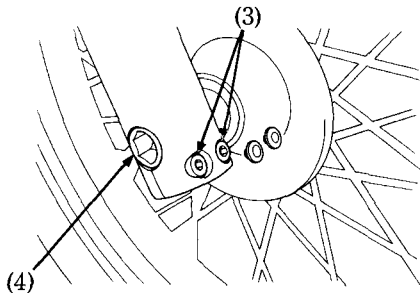

- (3) Fork pinch bolts
- (4) Front axle