

<b>(Ref. No.) Description</b>	<b>Function</b>
(1) Tripmeter reset knob	Resets tripmeter to zero (0) . Turn knob in direction shown.
(2) Speedometer	Shows riding speed.
(3) Odometer	Shows accumulated mileage.
(4) Tripmeter	Shows mileage per trip.
(5) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature.</p> <p>If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 20–21 and do not ride the motorcycle until the problem has been corrected.</p> <p><b>CAUTION:</b></p> <p><b>* Exceeding maximum running temperature may cause serious engine damage.</b></p>
(6) Turn signal indicator	Flashes when either turn signal is operated.
(7) Neutral indicator (green)	Light when the transmission is in neutral.
(8) High beam indicator (blue)	Light when the headlight is on high beam.