


- Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.
- Check that the new oil filter rubber seal is in good condition.

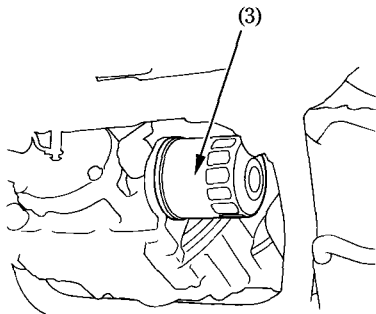


(3) Oil filter

- Apply a thin coat of engine oil to the new oil filter rubber seal (4).
- Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:

**10 N·m (1.0 kgf·m , 7 lbf·ft)**

Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

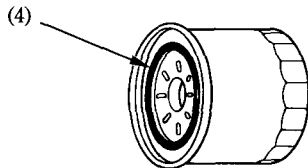

(4) Oil filter rubber seal