

INSTRUMENTS AND INDICATORS

The indicators are located near the speedometer.

Their functions are described in the table on the following page.

- (1) Neutral indicator
- (2) Turn signal indicator
- (3) High beam indicator
- (4) Speedometer
- (5) Coolant temperature indicator
- (6) Side stand indicator
- (7) Odometer/Tripmeter display
- (8) Tripmeter reset button and Odometer/Tripmeter select button
- (9) Low oil pressure indicator

