

(Ref. No.) Description	Function
(1) Neutral indicator (green)	Light when the transmission is in neutral.
(2) Turn signal indicator	Flashes when either turn signal is operated.
(3) High beam indicator (blue)	Light when the headlight is on high beam.
(4) Speedometer	Shows riding speed.
(5) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature.</p> <p>If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 20–21 and do not ride the motorcycle until the problem has been corrected.</p> <p>CAUTION:</p> <p>* Exceeding maximum running temperature may cause serious engine damage.</p>
(6) Side stand indicator	<p>Light when the side stand is put down.</p> <p>Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page39) is activated.</p>