


## SEAT

The seat must be removed for battery maintenance.

### Seat removal:

1. Remove the rear seat bolt (1).
2. Push the rear seat (2) forward and up.
3. Remove the front seat bolt (3).
4. Pull the front seat (4) back and up.

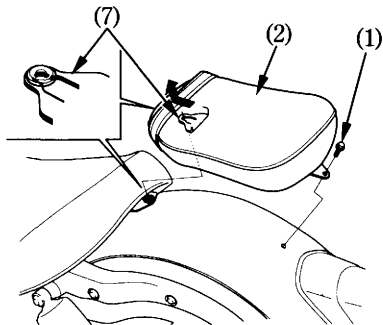


(1) Rear seat Bolt

(3) Front Seat bolt

(2) Rear Seat

### Seat installation:

1. Insert the front seat tab (5) into the frame cross member (6).
2. Install the front seat bolt (3).
3. Engage the rear seat hook (7) with the front seat bolt (3) and pull the rear seat (2) back.
4. Install the rear seat bolt (1).

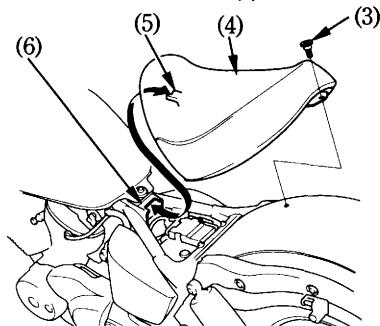

(4) Front seat

(6) Frame cross member

(5) Front seat tab

(7) Rear seat hook