

Servicing Your Honda

Service Preparations

Maintenance Component Locations	67
Tool Kit.....	70
Owner's Manual Storage.....	71
Storage Compartment.....	72
Side Cover Removal.....	73
Seat Removal.....	74

Service Procedures

Fluids & Filters

Fuel	75
Engine Oil & Filter.....	78
Coolant.....	88
Air Cleaner	92
Crankcase Breather	94
Final Drive Oil.....	95

Engine

Throttle	98
Clutch System.....	100
Engine Idle Speed.....	104
Spark Plugs.....	106

Chassis

Suspension	109
Brakes	112
Tires	120
Side Stand.....	127

Electrical

Battery	128
Appearance Care	133