
Engine Oil & Filter

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 145). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

- 1. Park the motorcycle on its side stand on a firm, level surface.
- 2. If the engine is cold, start it and let it idle for 3-5 minutes. Turn the engine off. Wait 2-3 minutes for the oil to settle.
- 3. Place a drain pan under the crankcase.
- 4. To drain the oil, remove the oil filler cap/dipstick, engine oil drain bolt (1), and sealing washer (2).

LEFT FRONT, UNDER ENGINE

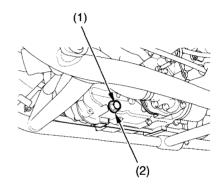

- (1) engine oil drain bolt
- (2) sealing washer