


Controls & Features

Choke Knob



LEFT SIDE

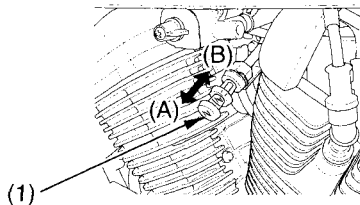

(1) choke knob (A) fully ON
(B) fully OFF

The choke knob may be used when starting the engine. See page 36 .

Ignition Switch

The ignition switch is used for starting and stopping the engine (page 35). The ignition key is also used to lock the steering for theft prevention (page 44). Insert the key and turn it to the right for the ON position.

Key Position	Function
ON	Electrical circuits on.
OFF	No electrical circuits function.