

## Basic Operation & Riding

---

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 184).

For information about carburetor adjustment and other parts replacement for riding at high altitude, see page 185.

Safe Riding Precautions .....	34
Starting & Stopping the Engine .....	35
Preparation.....	35
Starting Procedure .....	36
Flooded Engine.....	38
How to Stop the Engine .....	39
Shifting Gears.....	40
Braking .....	42
Parking .....	44
Riding with a Passenger or Cargo.....	47