

## Periodic Maintenance

Tires & Wheels	<p>Check the air pressure with a gauge and add air if needed (page 117). Examine the tread for wear (page 119). Look closely for nails, embedded objects, cuts, and other types of damage (page 119). Roll your motorcycle so you can inspect the entire surface.</p> <p>Check the condition of the rims and spokes.</p>
Fluids	<p>Check the levels of the engine oil (page 80), coolant (page 87), brake fluid (page 111), and final drive oil (page 93). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brake light, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the clutch lever (page 98), rear brake pedal (page 114), and throttle grip (page 96).</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>