


9. Remove the rear brake adjusting nut (11), disconnect the brake rod (12) from the brake arm (13) by pushing down on the rear brake pedal.
10. Disconnect the brake stopper arm (14) from the brake panel by removing the cotter pin (15), stopper arm nut (16), washer and rubber grommet.
11. Remove the axle holding bolt (17).

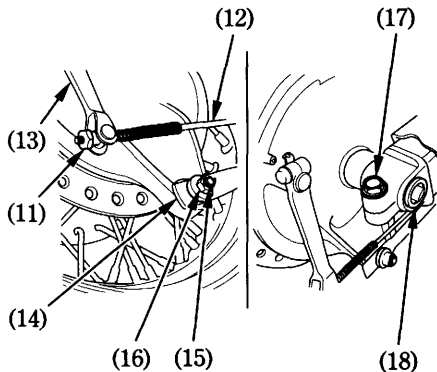

- |                               |                        |
|-------------------------------|------------------------|
| (11) Rear brake adjusting nut | (15) Cotter pin        |
| (12) Brake rod                | (16) Stopper arm nut   |
| (13) Brake arm                | (17) Axle holding bolt |
| (14) Brake stopper arm        | (18) Rear axle shaft   |