


Fuse Box:

The fuse box (1) is located behind the right side cover.

The specified fuse are:

10A,15A

1. Remove the right side cover (page 38).
2. Open the fuse box cover (2).
3. Pull out the fuse(3). If the fuse is blown, install a new fuse.
The spare fuses (4) are located in the fuse box.
4. Install the fuse box cover and right side cover.

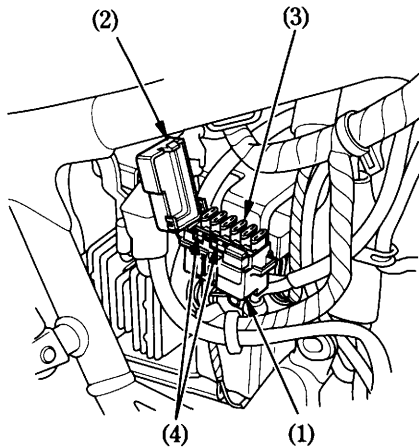

- (1) Fuse box
- (2) Fuse box cover
- (3) Fuse
- (4) Spare fuses