

## AIR CLEANER


Refer to the Safety Precautions on page 72 .

The air cleaner should be serviced at regular intervals (page 74 ). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the bolts (1) and the air cleaner housing cover (2).
2. Remove and discard the air cleaner element (3).
3. Thoroughly clean the inside of the air cleaner housing (4).
4. Install the new air cleaner element.

Use the Honda Genuine air cleaner element or an equivalent air cleaner element specified for your model. Using the wrong Honda air cleaner element or a non-Honda air cleaner element which is not of equivalent quality may cause premature engine wear or performance problems.

5. Install the removed parts in the reverse order of removal.

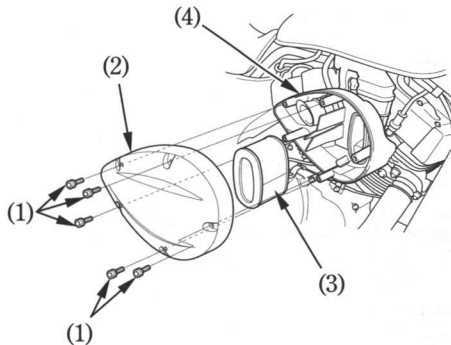

- (1) Bolts
- (2) Air cleaner housing cover
- (3) Air cleaner element
- (4) Air cleaner housing