

Rear Wheel Installation

- Reverse the removal procedure.
- Tighten the rear axle nut and brake stopper arm nut to specified torque.

Rear axle nut torque:

93 N·m (9.5 kgf·m , 69 lbf·ft)

Brake stopper arm nut torque:

22 N·m (2.2 kgf·m , 16 lbf·ft)

- Adjust the brake (pages 30 – 31) and drive chain (pages 92 – 93).
- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.