



## Battery Removal

The battery (4) is in the battery box below the seat.

1. Remove the seat (page 53 ).
2. Open the battery box cover (1).
3. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
4. Pull out the battery (4) from the battery box.

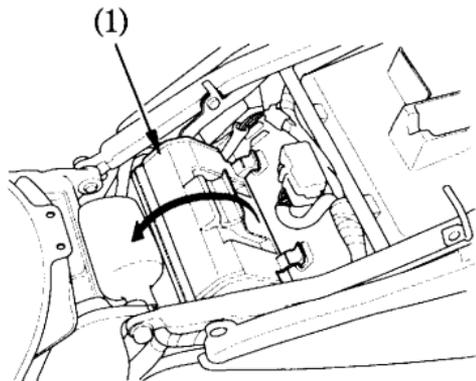

(1) Battery box cover

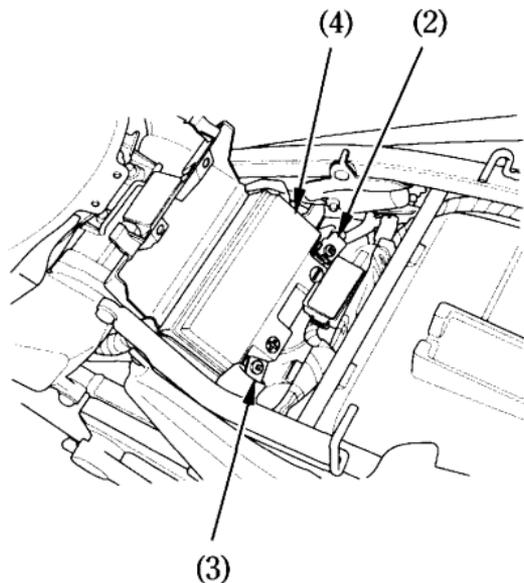

- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery