



3. With the rear of the fuel tank (3) raised, install the plug maintenance bar (4) furnished in the tool kit.

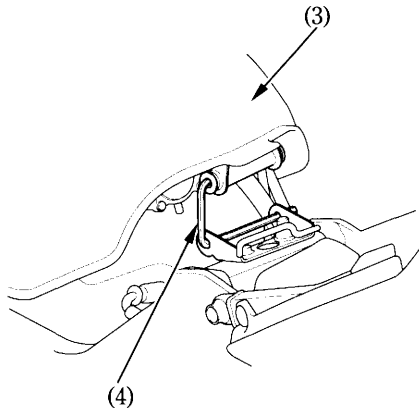

- (3) Fuel tank
(4) Plug maintenance bar

4. Remove the spark plug cap (5) from the spark plug, and remove the spark plug using the special plug wrench (6) furnished in the tool kit.

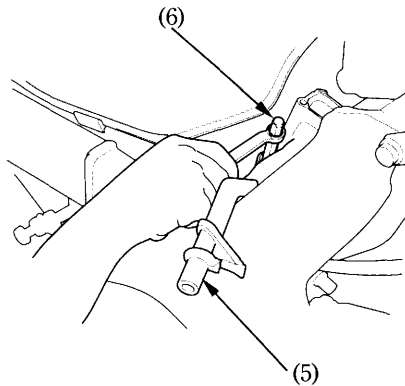

- (5) Spark plug cap
(6) Spark plug wrench