


### Initial Display

When the ignition switch is turned ON, the display will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The unit "mph" will be displayed only for E type.

Tripmeter will reset if the battery is disconnected.

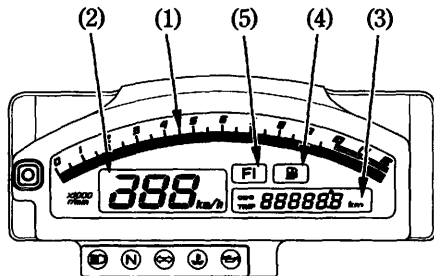

- (1) Tachometer
- (2) Speedometer
- (3) Multi-function display
- (4) Fuel indicator
- (5) PGM-FI malfunction indicator lamp (MIL)