


## Speed Unit Change

### (E type only)

The speedometer displays both “km/h” and “mph”.

Push and hold both the multi-function select and reset button (2) to select “km/h” or “mph”.

This function only operate while the display is in the “ODO” mode.

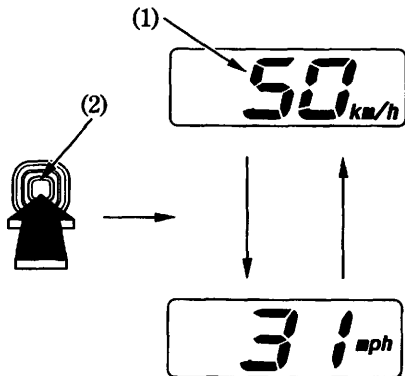

- (1) Speedometer
- (2) Multi-function select and reset button