


LOWER COWL

Removal:

1. Turn the bolts A (1) 90° counterclockwise.
2. Remove the bolts B (2), bolts C (3) and bolts D (4).
3. Remove the clips (5).
4. Remove the right (6) and left (7) lower cowl.

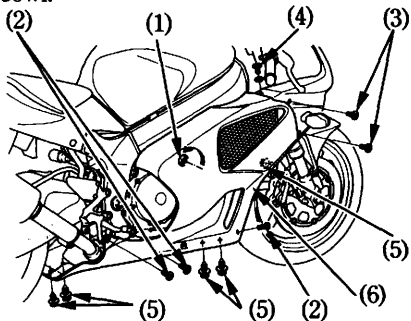

- (1) Bolts A (4) Bolts D (6) Right lower cowl
(2) Bolts B (5) Clips (7) Left lower cowl
(3) Bolts C

Installation:

- Installation can be done in the reverse order of removal.

