


Installation:

1. Install the side collars and position the wheel and rear brake bracket.

- While installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.
- Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

2. Make sure that the slot (8) on the swingarm (9) is located in the lug (10) on the rear brake bracket.

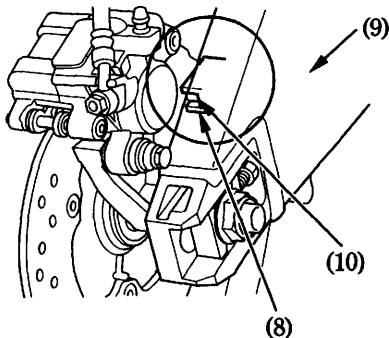

(8) Slot
(9) Swingarm

(10) Lug