

Main Fuse A:

The main fuse A (1) is located behind the rear cowl.

The specified fuse is:

30 A

1. Remove the rear cowl (page 54).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a spare main fuse (3).

The spare main fuse is located under the starter magnetic switch.

4. Reconnect the connector and install the rear cowl.

Main Fuse B:

The main fuse B (4) is attached the battery box cover.



The specified fuse is:

30 A

1. Remove the front seat (page 51).
2. Open the main fuse B cover (5).
3. Pull out the old fuse and install a spare main fuse (3).

The spare main fuse is located under the starter magnetic switch.

4. Close the main fuse B cover and install the front seat.

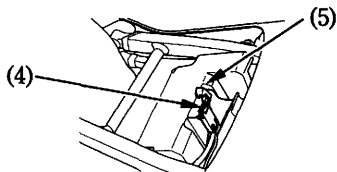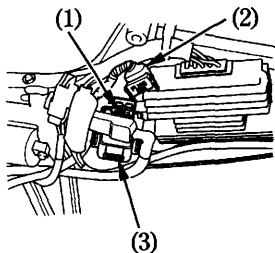

- (1) Main fuse A
- (2) Wire connector
- (3) Spare main fuse

- (4) Main fuse B
- (5) Main fuse B cover