


Headlight Bulb

1. Pull off the connector (1) without turning.
2. Remove the dust cover (2).
3. Remove the socket (3) while pressing down on the pin (4).
4. Pull out the bulb (5) without turning.
5. Install a new bulb in the reverse order of removal.

Install the dust cover with its arrow mark (6) facing up.

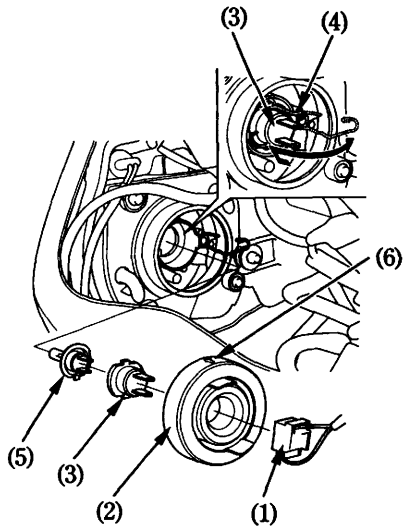

- (1) Connector
- (2) Dust cover
- (3) Socket

- (4) Pin
- (5) Bulb
- (6) Arrow mark