



## Gauges, Indicators & Displays

1	speedometer	Shows riding speed in miles or kilometers per hour (page 22 ). <i>Display Check.</i>
2	PGM-FI malfunction indicator lamp (MIL) (red)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and the engine stop switch is at RUN. If the indicator comes on at any other time, reduce speed and take your motorcycle to a Honda dealer as soon as possible. <i>Lamp Check.</i>
3	fuel indicator (amber)	When this indicator comes on while riding, fuel reserved in the tank is about: <b>1.19 US gal (4.5 ℓ)</b>
4	tachometer	Shows engine speed in revolutions per minute (rpm). <i>Display Check.</i>
5	tachometer red zone	Shows excessive engine rpm range (indicated from the beginning of the tachometer red zone) in which operation may damage the engine. Do not let the tachometer rpm display enter the red zone.

## 16 Instruments & Controls

