



Maintenance Schedule

ITEM	FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page
			× 1,000 mi	0.6	4	8	12	16	20	24	
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSION RELATED ITEMS	* FUEL LINE				I		I		I		—
	* THROTTLE OPERATION				I		I		I		—
	* CHOKE OPERATION				I		I		I		—
	* AIR CLEANER	2				I			I		—
	CRANKCASE BREATHER	3		C	C	C	C	C	C		104
	SPARK PLUGS		EVERY 16,000 mi (25,600 km) I EVERY 32,000 mi (51,200 km) R								112
	* VALVE CLEARANCE						I				—
	ENGINE OIL		INITIAL= 600 mi (1,000 km) or 1 month: R REGULAR= EVERY 8,000 mi (12,800 km) or 12 months: R								90
	ENGINE OIL FILTER			R		R		R		R	95
	* ENGINE IDLE SPEED			I	I	I	I	I	I	I	110
	RADIATOR COOLANT	4			I		I		R		100
	* COOLING SYSTEM				I		I		I		—
	* SECONDARY AIR SUPPLY SYSTEM				I		I		I		—
* EVAPORATIVE EMISSION CONTROL SYSTEM	5				I			I		—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 216).

