




Seat Removal

Rear Seat

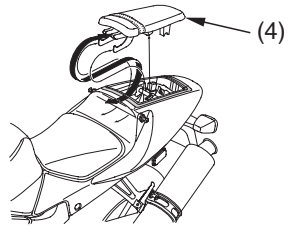

(4) rear seat

Removal


1. Remove the seat cowl panel (page 79) when using the rear seat (4).

Installation

1. Push forward and then down on the rear of the rear seat.

Be sure to securely lock the seat after reinstalling it.

To prevent scratches to the rear cowl, attach the seat cowl rubber (5) provided before installing the rear seat.

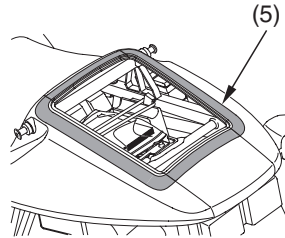

(5) seat cowl rubber

