



Engine Oil & Filter

14. Start the engine and let it idle for 3—5 minutes.
15. Stop the engine and wait 2—3 minutes.
16. Hold the motorcycle upright and check that the oil level is at the upper level mark in the inspection window (page 94).
17. Check that there are no oil leaks.
18. Install the lower fairing and inner fairing.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

