



Engine Idle Speed

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment.



Idle Speed Adjustment

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

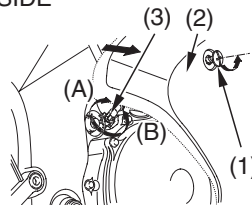

- (1) bolt
- (2) right lower fairing
- (3) throttle stop screw
- (A) increase
- (B) decrease

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.

