




Spark Plugs

2. Clean any dirt from around the spark plug bases.

Inspection


1. Disconnect the spark plug caps (3).
Take care to avoid damaging the spark plug wire when disconnecting the caps.
2. Using a spark plug wrench (4), remove the spark plugs.

FRONT
(Front Cylinder)

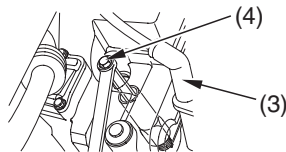

- (3) spark plug cap
(4) spark plug wrench

3. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
4. Using a 1.4 mm wire-type feeler gauge, check the spark plug gap (5) of each plug. The gauge should not fit in the gap. If it does fit, replace the plug with a new one.

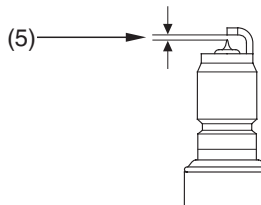

(5) spark plug gap

114 Servicing Your Honda

