




If You Have a Flat Tire

5. Remove the front axle shaft (5), wheel and side collars.

- Avoid depressing the brake lever when the caliper is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.



LEFT FRONT

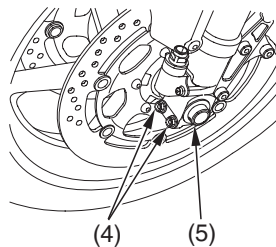

(5) front axle shaft



Installation

1. Install the side collars and position the front wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.

(cont'd)

