





## If a Fuse Blows

### LEFT SIDE

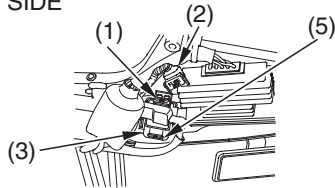

### UNDER FRONT SEAT

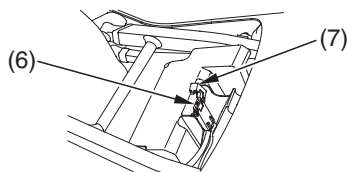


- (1) main fuse A
- (2) wire connector
- (3) starter magnetic switch
- (5) spare main fuse
- (6) main fuse B
- (7) main fuse B cover

### Main Fuse Access:

3. To access the main fuse A (1), disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull the main fuse A out.  
If it is blown (4), install the spare main fuse (5).

### MAIN FUSE

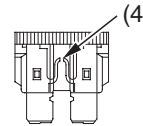

(4) blown fuse

5. Reconnect the wire connector.
6. To access main fuse B (6), open the main fuse B cover (7).
7. Pull the main fuse B out.  
If it is blown, install the spare main fuse.
8. Close the main fuse B cover.
9. Install the rear cowl and the front seat.

## 188 Taking Care of the Unexpected

