




If a Fuse Blows

Circuit Fuse Access:

 
10. Remove the left lower fairing (page 82).
11. Open the fuse box cover (8).

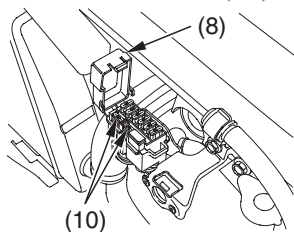

(8) fuse box cover (10) spare fuses

12. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (9), replace it with a spare fuse (10) of the same rating or lower.

CIRCUIT FUSE



(9) blown fuse

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

13. Close the fuse box cover.
14. Install the left lower fairing.

