

---

## Adding Coolant

Add coolant to the coolant reservoir, not the radiator.



### Advice

Use of poor quality water or radiator fluid other than the recommended type will cause corrosion / electrolysis.



### Caution

Do not remove the radiator cap while the engine is hot. Coolant can spurt out, causing severe scalding.  
Allow the engine and radiator to cool before attempting to remove the radiator cap.